



The initial power to your coil is open at the oil switch on start up. This timer allows a 15 second 'by-pass' with power going to #1 and out through #2 on the timer, by-passing the open oil switch. The Oil switch will then close and latch power to the starter coil once the oil pressure is built, before the timer opens #1 to #2 after 15 seconds.